


Tilt & Turn - Installation

The fixing methods recommended for the Blairs of Scotland Tilt & Turn window are as follows:

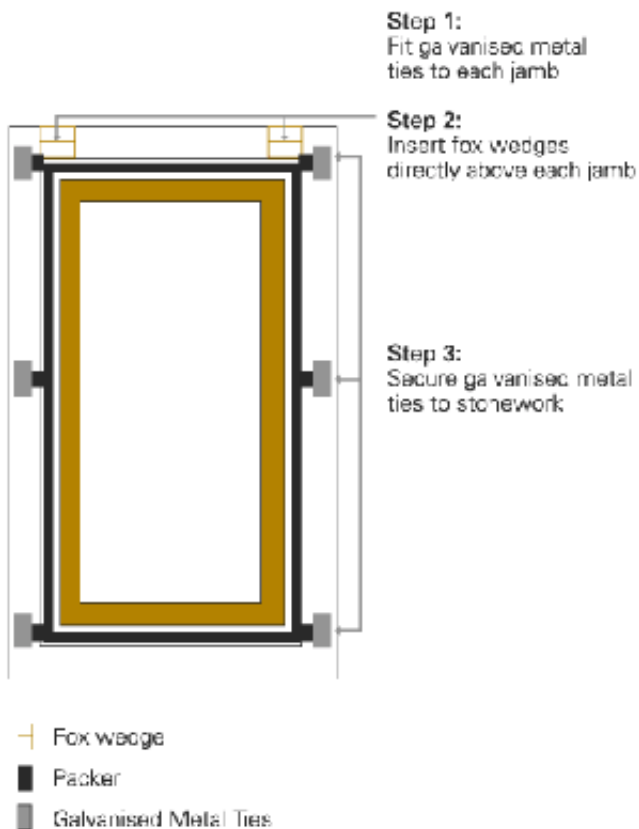

1. FIT GALVANISED METAL TIES TO EACH JAMB:

We recommend that galvanised metal ties be fixed to each jamb prior to installation of window in opening. These ties should be positioned at the top, centre and bottom of each jamb.

2. INSERT FOX WEDGES DIRECTLY ABOVE EACH JAMB:

Once the ties have been fitted to each jamb the window can be installed in the opening. By using fox wedges directly above each jamb the window can be temporarily held in position. The window should be fixed plumb, square and without twists or bends.

3. SECURE TIES TO STONework:

At this stage, should packers be required they should be fitted between jambs and stonework. After checking again that the jambs are straight, the ties may be secured to the stonework.

4. ENSURE SASH OPERATES FREELY:

Before final fixing ensure sash operates freely by referring to cleaning instructions.

5. ON SITE FINISHING:

If windows are not being supplied pre-finished from the factory, it is important to ensure that no paint or stain is applied onto the weather-stripping. Equally, care should be taken to make sure the hardware is kept clear of any grit or paint that would restrict the free movement of the sashes.

6. SITE PRACTICES:

When fitted, windows should not be used as access points to the building for personnel or materials, or resting points for scaffolding. This practice may seriously damage the windows and integrity of the coatings, with subsequent consequences on durability.

7. HANDLING OF SEMI & PREFINISHED WINDOWS:

Please ensure when handling or stacking such items adequate care and protection is given to avoid any damage.